

DIMBLK2 System Variable — GstarCAD 2027

DIMBLK2 System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > D System Variables > DIMBLK2

Function Description:

The DIMBLK2 system variable is used to set arrowhead for the second end of extension line when the DIMSAH is on.

Type	Strings
Saved in	Drawing
Initial value	""

Users can enter a Period "." to restore default settings.
Note: the annotative block can not be used as customized arrow for dimensions and leaders.

Other versions with matching text

[2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)