

DIMDEC System Variable — GstarCAD 2027

DIMDEC System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > D System Variables > DIMDEC

Function Description:

The DIMDEC system variable is used to set the number of decimal places in main units for dimensions.

Type	Integer
Saved in	Drawing
Initial value	4 (Imperial) or 2 (Metric)

The precious is based on selected units or angle formats. The specified value will be applied on angular dimension when the DIMDEC system variable set to be -1.

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)