

DIMDLE System Variable — GstarCAD 2027

DIMDLE System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > D System Variables > DIMDLE

Function Description:

The DIMDLE system variable is used to set the distance the dimension line extends beyond the extension line when oblique strokes are created instead of arrowheads.

Type	Real
Saved in	Drawing
Initial value	0.0000

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)