

DIMDSEP System Variable — GstarCAD 2027

DIMDSEP System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > D System Variables > DIMDSEP

Function Description:

The DIMDSEP system variable is used to specify a single character decimal separator for creating dimension whose unit format is decimal.

Type	Single character
Saved in	Drawing
Initial value	. (Imperial) or (Metric)

Input a single character under command prompts.
If the dimension units has set to be decimal, it uses characters that specified by DIMDSEP, rather than default decimal point.
If the DIMDSEP has set to be NULL, it uses decimal point as dimension separator.

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)