

DIMFXLON System Variable — GstarCAD 2027

DIMFXLON System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > D System Variables > DIMFXLON

Function Description:

The DIMFXLON system variable is used to control whether to set a constant value for extension line.

Type	Parameter
Saved in	Drawing
Initial value	off

When DIMFXLON is on, the length of extension line is specified by DIMFXL system variable.

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)