

DIMLAYER System Variable — GstarCAD 2027

4690 kbadmin September 25, 2026 [System Variable Reference](#) 0 9

DIMLAYER System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > D System Variables > DIMLAYER

Function Description:

The DIMLAYER system variable is used to specify a default layer for new dimensions, the new dimensions are created on that layer automatically instead of creating dimensions on the current layer.

Type	String
Saved in	Drawing
Initial value	Use current

Other versions with matching text

[2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4690>