

DIMLDRBLK System Variable — GstarCAD 2027

DIMLDRBLK System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > D System Variables > DIMLDRBLK

Function Description:

The DIMLDRBLK system variable is used to specify arrowhead type for leaders.

Type	Strings
Saved in	Drawing
Initial value	""

Input a Period "." to restore the default settings(closed- filled arrowhead).
Note: the annotative block can not be used as custom arrowhead for dimension or leader.

Other versions with matching text

[2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)