

DIMLIM System Variable — GstarCAD 2027

DIMLIM System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > D System Variables > DIMLIM

Function Description:

The DIMLIM system variable is used to generate dimension limits as the default text.

Type	Parameter
Saved in	Drawing
Initial value	off

Specifying the DIMLIM to be on can close the DIMTOL.

System Variable Value:

- Off:** dimension limits are not generated as default text
- on:** dimension limits are generated as default text

Other versions with matching text

[2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4693>