

DIMLTYPE System Variable — GstarCAD 2027

4696 kbadmin September 25, 2026 [System Variable Reference](#) 0 10

DIMLTYPE System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > D System Variables > DIMLTYPE

Function Description:

The DIMLTYPE system variable is used to set the linetype of dimension line.

Type	Strings
Saved in	Drawing
Initial value	""

The DIMLTEX1 system variable value is "BYLAYER", "BYBLOCK", or names of linetype.

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4696>