

DIMLUNIT System Variable — GstarCAD 2027

DIMLUNIT System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > D System Variables > DIMLUNIT

Function Description:

The DIMLUNIT system variable is used to set units for all dimension types(except angular dimension).

Type	Integer
Saved in	Drawing
Initial value	2
Range	1,2,3,4,5,6

System Variable Value:

- 1: scientific
- 2: decimal
- 3: engineering
- 4: architecture (always stacked displaying)
- 5: fractional (always stacked displaying)
- 6: Microsoft Windows Desktop (decimal format using Control Panel settings for decimal separator and number grouping symbols)

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4697>