

DIMSAH System Variable — GstarCAD 2027

DIMSAH System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > D System Variables > DIMSAH

Function Description:

The DIMSAH system variable is used to control the display of arrowhead block in dimension line.

Type	Parameter
Saved in	Drawing
Initial value	Off

System Variable Value:

- off:** use the arrowhead block set by DIMBLK system variable
- on:** use the arrowhead block set by DIMBLK1 and DIMBLK2 system variable

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)