

DIMSD1 System Variable — GstarCAD 2027

DIMSD1 System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > D System Variables > DIMSD1

Function Description:

The DIMSD1 system variable is used to control whether to hide the fist dimension line and arrowhead.

Type	Parameter
Saved in	Drawing
Initial value	Off

If this system variable set to on, it hides the extension line and arrowhead between the first extension line and text.

System Variable Value:

- Off:** display the first dimension line
- On:** hide the first dimension line

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4704>