

DIMSOXD System Variable — GstarCAD 2027

DIMSOXD System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > D System Variables > DIMSOXD

Function Description:

The DIMSOXD system variable is used to hide arrowheads when there is no sufficient space in extension line.

Type	Parameter
Saved in	Drawing
Initial value	Off

System Variable Value:

Off: display arrowhead

On: hide arrowhead

If there is no sufficient space in extension line and the DIMITIX is on, the setting of DIMSOXD is on without arrowhead. If DIMITIX has set to be off, the DIMSOXD is disabled.

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4709>