

DIMTDEC System Variable — GstarCAD 2027

4712 kbadmin September 25, 2026 [System Variable Reference](#) 0 17

DIMTDEC System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > D System Variables > DIMTDEC

Function Description:

The DIMTDEC system variable is used to set the number of decimal places displayed in tolerance values for primary units in a dimension.

Type	Integer
Saved in	Drawing
Initial value	4(Imperial) or 2(Metric)

This system variable has no effect unless DIMTOL is set to On. The default for DIMTOL is Off.

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4712>