

DIMTFILLCLR System Variable — GstarCAD 2027

4715 kbadmin September 25, 2026 [System Variable Reference](#) 0 20

DIMTFILLCLR System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > D System Variables > DIMTFILLCLR

Function Description:

The DIMTFILLCLR system variable is used to set color for the background of dimension text.

Type	Integer
Saved in	Drawing
Initial value	0

The color number displays in "Select Color" dialog box. Users can select "BYBLOCK" by entering "0"; they can also select "BYLAYER" by entering "256."

Other versions with matching text

[2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4715>