

# DIMTIX System Variable — GstarCAD 2027

## DIMTIX System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > D System Variables > DIMTIX

### Function Description:

The DIMTIX system variable is used to draw text between extension lines.

|               |           |
|---------------|-----------|
| Type          | Parameter |
| Saved in      | Drawing   |
| Initial value | off       |

### System Variable Value:

- Off:** for linear dimension and angular dimension, place dimension text internal extension lines if there is sufficient space
- On:** draw dimension text between extension lines even if the text is usually placed outside of extension lines. For radius dimension and diameter dimension, the dimension text can be forced to place external of circles or arcs by DIMTIX system variable.

### Other versions with matching text

[2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4717>