

DIMTMOVE System Variable — GstarCAD 2027

DIMTMOVE System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > D System Variables > DIMTMOVE

Function Description:

The DIMTMOVE system variable is used to set the moving rulers for dimension text.

Type	Integer
Saved in	Drawing
Initial value	0
Range	0,1,2

System Variable Value:

- 0:** the dimension line and dimension text moves together
- 1:** add a leader when moving dimension text
- 2:** dimension text can move freely without additional leaders

Other versions with matching text

[2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4719>