

DIMTOFFSET System Variable — GstarCAD 2027

DIMTOFFSET System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > D System Variables > DIMTOFFSET

Function Description:

The DIMTOFFSET system variable is used to control the gap between the dimension line and the dimension text, if the space above the arrows is not enough for the dimension text when you place the dimension below or right the objects, the text is placed downward.

Type	Integer
Saved in	Drawing
Initial value	1
Range	0,1

System Variable Value:

- 0:** the gap between dimension text and dimension line keeps same
- 1:** the same as AutoCAD

Other versions with matching text

[2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4720>