

DIMTOL System Variable — GstarCAD 2027

DIMTOL System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > D System Variables > DIMTOL

Function Description:

The DIMTOL system variable is used to add tolerance to dimension text.

Type	Parameter
Saved in	Drawing
Initial value	Off

Setting the DIMTOL can turn off the DIMLIM system variable.

Other versions with matching text

[2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)