

DIMTOLJ System Variable — GstarCAD 2027

DIMTOLJ System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > D System Variables > DIMTOLJ

Function Description:

The DIMTOLJ system variable is used to set vertical justification for tolerance values relative to surface dimension text.

Type	Integer
Saved in	Drawing
Initial value	1(Imperial) or 0(Metric)

This system variable will not work unless the DIMTOL set to be on. The default value for DIMTOL is off.

System Variable Value:

- 0: bottom
- 1: center
- 2: top

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4724>