

DIMTP System Variable — GstarCAD 2027

DIMTP System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > D System Variables > DIMTP

Function Description:

The DIMTP system variable is used to set the maximum tolerance limit for dimension text when the DIMTOL or DIMLIM is on.

Type	Real
Saved in	Drawing
Initial value	0.0000

The DIMTM system variable can recognize a value with symbols. If the DIMTOL is on and the settings of DIMTP and DIMTM are the same, it can create a tolerance value. If the values of DIMTM and DIMTP are different, the upper tolerance is drawn above the lower, and a plus sign is added to the DIMTP value if it is positive.

Other versions with matching text

[2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)