

# DIMTXTDIRECTION System Variable — GstarCAD 2027

4730 kbadmin September 25, 2026 [System Variable Reference](#) 0 11

## DIMTXTDIRECTION System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > D System Variables > DIMTXTDIRECTION

### Function Description:

The DIMTXTDIRECTION system variable is used to specify the dimension text reading direction.

|               |         |
|---------------|---------|
| Type          | Integer |
| Saved in      | Drawing |
| Initial value | 0       |
| Range         | 0,1     |

### System Variable Value:

- 0:** display dimension text in left-to- right reading style
- 1:** display dimension text in right-to-left reading style

### Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4730>

