

DIMUNIT System Variable — GstarCAD 2027

DIMUNIT System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > D System Variables > DIMUNIT

Function Description:

The DIMUNIT system variable is used to set the dimension format.

Type	Real
Saved in	Drawing
Initial value	2
Range	1 ~ 8

System Variable Value:

- 1: scientific
- 2: scientific
- 3: engineering
- 4: architectural -stack
- 5: fractional-stack
- 6: architectural
- 7: fractional
- 8: Microsoft Windows Desktop

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4732>