

DIMZIN System Variable — GstarCAD 2027

DIMZIN System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > D System Variables > DIMZIN

Function Description:

The DIMZIN system variable is used to control the zero suppression for primary unit value.

Type	Integer
Saved in	Drawing
Initial value	0 (Imperial) or 8(Metric)
Range	0 ~ 15

System Variable Value:

- 0:** suppress zero feet and zero inch
- 1:** include zero feet and zero inch
- 2:** u include zero feet and suppress zero inch
- 3:** include zero inch and suppress zero feet
- 4:** suppress the leading zero in decimal dimension
- 8:** suppress the trailing zero in decimal dimension
- 12:** suppress the leading zero and trailing zero

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4734>