

DIVMESHCONEBASE — GstarCAD 2027

DIVMESHCONEBASE

[GstarCAD 2027](#) · [System Variables](#)

System Variables > D System Variables > DIVMESHCONEBASE

Function Description:

The DIVMESHCONEBASE system variable is used to set the number of subdivisions between the perimeter and the center point of mesh cone base.

Type	Parameter
Saved in	User-settings
Initial value	3

This setting can affect the new mesh cone created by MESH command.
This value can also be set in "Mesh Primitive Option" dialog box.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)