

DIVMESHPLYRBASE System Variable — GstarCAD 2027

4746 kbadmin September 25, 2026 [System Variable Reference](#) 0 18

DIVMESHPLYRBASE System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > D System Variables > DIVMESHPLYRBASE

Function Description:

The DIVMESHPLYRBASE system variable is used to set the number of subdivisions from the base center to its perimeter of mesh pyramid.

Type	Integer
Saved in	User-settings
Initial value	3

This setting can affect the new mesh pyramid created by MESH command.
This value can also be set in "Mesh Primitive Option" dialog box.

Other versions with matching text

[2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4746>