

DIVMESHSPHEREAXIS System Variable — GstarCAD 2027

4749 kbadmin September 25, 2026 [System Variable Reference](#) 0 13

DIVMESHSPHEREAXIS System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > D System Variables > DIVMESHSPHEREAXIS

Function Description:

The DIVMESHSPHEREAXIS system variable is used to set the number of subdivisions around the axis endpoint of the mesh sphere.

Type	Integer
Saved in	User-settings
Initial value	12

This setting can affect the new mesh sphere created by MESH command.
This value can also be set in "Mesh Primitive Option" dialog box.

Other versions with matching text

[2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4749>