

DWFOSNAP System Variable — GstarCAD 2027

DWFOSNAP System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > D System Variables > DWFOSNAP

Function Description:

The DWFOSNAP system variable is used to control whether to active object snap mode for geometric drawing in attached DWF or DWFx reference underlay.

Type	Integer
Saved in	Registry
Initial value	1
Range	0,1

System Variable Value:

- 0:** disabled all object snap for geometric drawing in attached DWF or DWFx reference underlay
- 1:** disabled all object snap for geometric drawing in attached DWF or DWFx reference underlay

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4767>