

DWGCODEPAGE System Variable — GstarCAD 2027

4769 kbadmin September 25, 2026 [System Variable Reference](#) 0 21

DWGCODEPAGE System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > D System Variables > DWGCODEPAGE

Function Description:

The DWGCODEPAGE system variable is used to store the same value as the SYSCODEPAGE system variable for compatibility.
(Read-Only)

Type	Strings
Saved in	Not saved
Initial value	Unknown

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4769>