

DWGTITLED System Variable — GstarCAD 2027

DWGTITLED System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > D System Variables > DWGTITLED

Function Description:

The DWGTITLED system variable is used to specify whether the current drawing is named or not.
(Ready-Only)

Type	Integer
Saved in	Not saved
Initial value	0
Range	0,1

System Variable Value:

- 0:** the drawing has named
- 1:** the drawing has not named

Other versions with matching text

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4772>