

DYNDIGRIP System Variable — GstarCAD 2027

DYNDIGRIP System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > D System Variables > DYNDIGRIP

Function Description:

The DYNDIGRIP system variable is used to control which dynamic dimension displaying when stretching grips.

Type	Bitcode
Saved in	Registry
Initial value	31
Range	0 ~ 31

The DYNDIVIS system variable must be set to 2 to display all dynamic dimension.

System Variable Value:

- 0:** none
 - 1:** resulting dimension
 - 2:** length change dimension
 - 4:** absolute angle dimension
 - 8:** angle change dimension
 - 16:** arc radius dimension
- The DYNMODE system variable is used to turn on or off dynamic input.

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4775>