

DYNDIVIS System Variable — GstarCAD 2027

DYNDIVIS System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > D System Variables > DYNDIVIS

Function Description:

The DYNDIVIS system variable is used to control the dynamic dimension number when stretching grips.

Type	Integer
Saved in	Registry
Initial value	1
Range	0,1,2

The DYNDIGRIP system variable controls which dynamic dimension is displayed when editing grips by stretching.

System Variable Value:

- 0:** only display the first dynamic dimension when display cycle order
 - 1:** only display the first two dynamic dimensions when display cycle order
 - 2:** display all dynamic dimensions controlled by DYNDIGRIP system variable
- The DYNMODE system variable is used to turn on or off dynamic input.

Other versions with matching text

[2016](#) · [2017](#) · [2018](#) · [2019](#) · [2020](#) · [2021](#) · [2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4776>