

DYNMODE System Variable — GstarCAD 2027

DYNMODE System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > D System Variables > DYNMODE

Function Description:

The DYNMODE system variable is used to turn on or off the dynamic input mode.

Type	Integer
Saved in	Registry
Initial value	3
Range	0,1,2,3

If specifying a negative value to DYNMODE system variable, it turns off the dynamic input but stores its settings.

System Variable Value:

- 0:** turn off all dynamic input including dynamic prompts
- 1:** pointer input on
- 2:** dimensional input on
- 3:** both pointer input and dimensional input on

If specified DYNPROMPT to be 1, it displays dynamic prompts when setting DYNMODE to be 1,2, or 3.

If specified DYNMODE to be 2 or 3, it switches to pointer input when inputting comma, angle bracket (>) or selecting multiple grips.

If specified DYNMODE to be 1,2, or 3, it temporarily closes all functions instead of F12.

Users can set dynamic input option in drafting settings dialog box.

Other versions with matching text

[2022](#) · [2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4778>