

DYNPIVIS System Variable — GstarCAD 2027

DYNPIVIS System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > D System Variables > DYNPIVIS

Function Description:

The DYNPIVIS system variable is used to control when to display pointer input.

Type	Integer
Saved in	Registry
Initial value	1
Range	0,1,2

System Variable Value:

- 0:** The DYNPIVIS system variable is used to control when to display pointer input.
1: The DYNPIVIS system variable is used to control when to display pointer input.
2: always
The DYNMODE system variable turns dynamic input on and off.

Other versions with matching text

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4781>