

DYNPROMPT System Variable — GstarCAD 2027

DYNPROMPT System Variable

[GstarCAD 2027](#) · [System Variables](#)

System Variables > D System Variables > DYNPROMPT

Function Description:

The DYNPROMPT system variable is used to control the display of prompts in dynamic input.

Type	Integer
Saved in	Registry
Initial value	1
Range	0,1

System Variable Value:

0:Off

1: On

The DYNMODE system variable turns dynamic input on and off.
If specified DYNMODE to be 0, it does not display prompts no matter how to set the DYNPROMPT system variable.

Other versions with matching text

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4782>