

CONSTRAINTBARDISPLAY System Variable — GstarCAD 2027

4826 kbadmin September 25, 2026 [What's New](#) 0 19

CONSTRAINTBARDISPLAY System Variable

[GstarCAD 2027](#) · [Whats New](#)

Function Description:

Controls the display of the constraint bar for subsequent geometric constraints and controls the display of hidden constraints for selected objects.

Type: Bit Code

Storage Location: Registry

Default Value: 3

Range: 0, 1, 2

List of Specific Descriptions:

Value	Description
0	The constraint bar will be automatically hidden after applying geometric constraints.
1	The constraint bar will be displayed when geometric

constraints are applied to an object.
Both geometric and dimensional constraints can display any hidden constraints, but only after selecting the constrained object.

Other versions with matching text

[2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4826>