

CONSTRAINTBARMODE System Variable — GstarCAD 2027

4827 kbadmin September 25, 2026 [What's New](#) 0 22

CONSTRAINTBARMODE System Variable

[GstarCAD 2027](#) · [Whats New](#)

Function Description:

Controls the display of geometric constraints on the constraint bar. Setting CONSTRAINTBARMODE to 4095 will display the constraint bar for all constraint types

Type: Bit Code

Save Location: Registry

Initial Value: 4095

Range: /

Specific List Explanation:

Value	Description
1	Horizontal
2	Vertical
4	Perpendicular
8	Parallel

16	Tangent
32	Smooth
64	Coincident
128	Concentric
256	Collinear
512	Symmetric
1024	Equal
2048	Fix

Other versions with matching text

[2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4827>