

Convert — GstarCAD 2027

4835 kbadmin September 25, 2026 [What's New](#) 0 8

Convert

[GstarCAD 2027](#) · [Whats New](#)

Function Description:

Converts the dimensional constraints to constraint parameters.

Command Access:

Menu Item: /

Ribbon: Block Editor > Dimensional > Convert

Toolbar: /

Command Line: BCPARAMETER > Convert

Command Alias: /

Command Prompts:

Select dimensional constraints to convert:

Operation Steps:

1. As shown in the figure, the left side displays dimensional constraints, while the right side shows constraint parameters.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4835>