

DYNPICOORDS System Variable — GstarCAD 2027

4856 kbadmin September 25, 2026 [What's New](#) 0 14

DYNPICOORDS System Variable

[GstarCAD 2027](#) · [Whats New](#)

Function Description:

The DYNPICOORDS system variable is used to control to use relative coordinate format or absolute coordinate format when using pointer input.

Type	Parameter
Saved in	Registry
Initial value	0
Range	0,1

System Variable Value:

- 0: relative
- 1: absolute

Other versions with matching text

[2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4856>