

ENGINEERINGVIEWMODE System Variable — GstarCAD 2027

4863 kbadmin September 25, 2026 [What's New](#) 0 8

ENGINEERINGVIEWMODE System Variable

[GstarCAD 2027](#) · [Whats New](#)

Function Description:

The ENGINEERINGVIEWMODE system variable is used to control the effect of view display.

Type	Integer
Saved in	Registry
Initial value	0
Range	0,1

System Variable Value:

- 0: keep original effect
- 1: Switch to engineering view mode

Other versions with matching text

[2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4863>