

HATCHQUICKPREVIEW System Variable — GstarCAD 2027

4886 kbadmin September 25, 2026 [What's New](#) 0 9

HATCHQUICKPREVIEW System Variable

[GstarCAD 2027](#) · [Whats New](#)

Function Description:

The HATCHQUICKPREVIEW system variable is used to control whether or not a preview of the hatch pattern is displayed when the number of hatch entities is high.

Type	Integer
Saved in	Registry
Initial value	1500
Range	Integers between -3000 and 3000

System Variable Value:

- 0<math>n\leq 3000:** Launches a hatch quick preview regardless of the number of entities
- 3000 $\leq n\leq 0$:** Launches hatch quick preview when the number of entities is ≤ 3000 , hatch quick preview is not enabled when the number of entities > 3000 .

Other versions with matching text

[2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4886>