

HPBOUNDSET System Variable — GstarCAD 2027

4887 kbadmin September 25, 2026 [What's New](#) 0 8

HPBOUNDSET System Variable

[GstarCAD 2027](#) · [Whats New](#)

Function Description:

The HPBOUNDSET system variable is used to control the default option for the hatch boundary set.

Type	Integer
Saved in	Registry
Initial value	0

System Variable Value:

- 0: Use Current Viewport.
- 1: Use Current Drawing.

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4887>