

VPMAXIMIZEDSTATE System Variable — GstarCAD 2027

4942 kbadmin September 25, 2026 [What's New](#) 0 16

VPMAXIMIZEDSTATE System Variable

[GstarCAD 2027](#) · [Whats New](#)

Function Description:

The VPMAXIMIZEDSTATE system variable is used to specify whether the viewport is maximized or not.
(Read-Only)

Type	Integer
Saved in	Not saved
Initial value	0
Range	0,1

If started the PLOT command, the viewport maximization will be canceled.

System Variable Value:

- 0:** do not maximize
- 1:** maximize

Other versions with matching text

[2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4942>