

ACADLSPASDOC System Variable — GstarCAD 2027

4954 kbadmin September 25, 2026 [Command Reference](#) 0 9

ACADLSPASDOC System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The ACADLSPASDOC system variable is used to control whether load the gcad.lsp file to each opened drawings or the first opened drawing in a session.

Type	Integer
Saved in	Registry
Initial value	0
Range	0,1

System Variable Value:

- 0:** loads *gcad.lsp* into just the first drawing opened drawing in a session
- 1:** loads *gcad.lsp* into every opened drawing

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4954>