

ACISOUTVER System Variable — GstarCAD 2027

4957 kbadmin September 25, 2026 [Command Reference](#) 0 11

ACISOUTVER System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The ACISOUTVER system variable is used to control the ACIS version of SAT files which created by ACISOUT command.

Type	Integer
Saved in	Not saved
Initial value	70
Range	15 ~ 120

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4957>