

AFLAGS System Variable — GstarCAD 2027

AFLAGS System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The AFLAGS system variable is used to set attributes options.

Type	Integer
Saved in	Not saved
Initial value	16
Range	0 ~ 63

The setting is stored as a bitcode using the sum of listed system variable values.

System Variable Value:

- 0:** No selected attribute mode
- 1:** Invisible
- 2:** Constant
- 4:** Verify
- 8:** Preset
- 16:** Lock position
- 32:** Multiple lines

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4964>