

ANNOAUTOSCALE System Variable — GstarCAD 2027

4968 kbadmin September 25, 2026 [Command Reference](#) 0 8

ANNOAUTOSCALE System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The ANNOAUTOSCALE system variable is used to update annotative objects to support annotation scales when they are changed.

If the ANNOAUTOSCALE system variable is a negative number, it closes auto scale function, but settings reserved.

Type	Integer
Saved in	Registry
Initial value	-4
Range	-4 ~ 4

System Variable Value:

- 0:** the new set annotation scales has not added to annotation objects
- 1:** add new set annotation scales to annotative objects which support current scales except for those on layers that are turned off, frozen, locked or that are set to Viewport > Freeze
- 2:** add new set annotation scales to annotative objects which support current scales except for those on layers that are turned off, frozen or that are set to Viewport > Freeze
- 3:** add new set annotation scales to annotative objects which support current scales except for those on locked layers
- 4:** add new set annotation scales to all annotative objects which support current scales

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4968>