

# ANNOTATIVEDWG System Variable — GstarCAD 2027

## ANNOTATIVEDWG System Variable

[GstarCAD 2027](#) · [Command Reference](#)

### Function Description:

The ANNOTATIVEDWG system variable is used to specify whether a drawing displaying as an annotation block when inserting to another drawing.

|               |         |
|---------------|---------|
| Type          | Integer |
| Saved in      | Drawing |
| Initial value | 0       |
| Range         | 0,1     |

### System Variable Value:

- 0:** non- annotative
- 1:** annotative

**Note:** if the drawing contains annotative objects, the ANNOTATIVEDWG system variable changes to be read-only.

### Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4969>