

ATTDIA System Variable — GstarCAD 2027

4974 kbadmin September 25, 2026 [Command Reference](#) 0 7

ATTDIA System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The ATTDIA system variable is used to control whether it prompts to input attributes by dialog box when executing INSERT command.

Type	Integer
Saved in	Registry
Initial value	1
Range	0,1

System Variable Value:

- 0: prompts to input attributes by commands
- 1: input attributes by dialog box

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4974>