

ATTMULTI System Variable — GstarCAD 2027

4977 kbadmin September 25, 2026 [Command Reference](#) 0 18

ATTMULTI System Variable

[GstarCAD 2027](#) · [Command Reference](#)

Function Description:

The ATTMULTI system variable is used to control whether it is available to create multiple text attributes.

Type	Integer
Saved in	Registry
Initial value	1
Range	0,1

System Variable Value:

- 0:** turn off all access to create multiple text attributes. It is still able to view and edit multiple text attributes.
- 1:** turn on all access to create multiple text attributes.

Other versions with matching text

[2023](#) · [2024](#) · [2025](#) · [2026](#)

Online URL: <https://www.kb2.gstarcad.com.my/article.php?id=4977>